

# UNITEC Retrokit instructions

1. Ensure you have a working wired internet connection at the car wash site.

**Note:** to program and configure your CryptoPay equipment you must have a working internet connection at the car wash site.

2. Call and get your merchant account with WorldPay: 678-587-1450 (Contact: Che Powell) if not already established.

**Note:** to program and configure your CryptoPay equipment you must have an activated merchant account with WorldPay.

3. Your retrokit includes one year of the CryptoPay GoGreen Receipt Service – to activate this service call CryptoPay: 719-277-7400.

4. Watch the Unitec Video Installation instructions at: [www.getcryptopay.com](http://www.getcryptopay.com) (Click on the 'Video' Tab and watch the Unitec Wash Select Videos).

5. After installing the label and backing plates that come with your kit, mount the swiper on the WS II door.

6. The display adapter circuit board is installed inline between the top **display** circuit board and the ribbon cable that attaches to that circuit board.

7. Wire the swiper as follows:

- Swiper yellow wire to J1 pin 3 at Display I/O Board.
- Swiper black wire to J1 pin 4 at Display I/O Board.
- One swiper red/green stripe wire to J3 Pin 6 (coin 3) of Display I/O Board. Note the red/green stripe wires are interchangeable.
- The other swiper red/green stripe wire to J3 Pin 3 (coin com) of Display I/O Board.
- The two grey wires are not used (please tie off and insulate).

8. Insure the Token coin value is set to \$1.00. (See the instructions on the next page to check).

9. Once the token value is confirmed, test the swiper for operation. The sale price will be displayed in the MyCryptoPay list of recent purchases approximately two hours after test.

## 2.11.2 Defining the Value of a Token

This function allows you to configure the value of the token (coin input 3 for USA), by changing the "Token Value". This is the value that the Wash Select II will register for each token pulse received by the token input. See Section 3.4.2 to set multiple token values if you are using more than one type of token.

1. Using the toggle switch at the top of the CPU board, place the Wash Select II in setup mode by moving the switch toward the back of the Wash Select II case. (The CPU board is located on the inside right wall of the Wash Select II case.)

Using the (3) key to scroll forward and the (1) key to scroll back, scroll through the main menu until the "Cash & Tokens" option is displayed. Press the (\*) key to enter.

Using the (3) key scroll through this menu until the "Token Value" option is displayed, and then press the (\*) key to enter.

Enter the "Token Value " in cents format, and then press the (\*) key. (Example: A value of \$2 would be entered as 200.)

**Default: \$1.00**